


SH216C Cold Chain Thermometer

User Manual

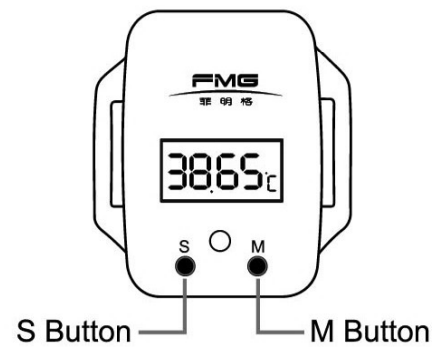

Thanks for having purchased the cold chain thermometer. The product designed ultrathin micromation in shape, dust proof, moisture proof and water sealed. Applied for measuring storing and checking the temperature of food, pharmaceutical products and chemicals at their storage and transportation.




Functional Characteristics

Hourly temperature data recording for 120 hours
Maximum & Minimum temperature date records
Measurement range and precision: $-20\text{ }^{\circ}\text{C} \sim 60\text{ }^{\circ}\text{C}$, $\pm 0.5\text{ }^{\circ}\text{C}$

Startup

Using the pencil tip to press any button on the product to turn on the thermometer, temperature data measuring every minute

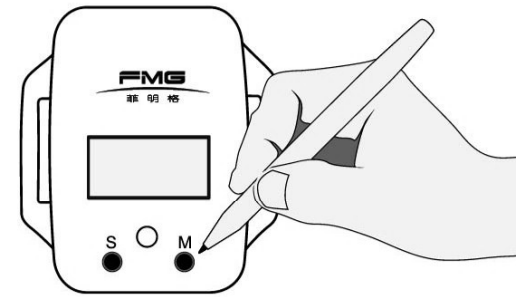

Temperature Units Setting

Using the pencil tip to press the M button during 3 seconds to set temperature units, then short press the S button to select units between $^{\circ}\text{C}$ or $^{\circ}\text{F}$, short press the M button to confirm, or no button operation, it will exist for measurement display after 10 seconds

Inquiring records

Short press the M button, \uparrow icon appears at the LCD screen, showing the maximum records, short press the M button again, \downarrow icon appears, showing the minimum records, Press the M key again, showing that the last time, temperature and time

serial number were collected and then, in turn, press the S key screen display time serial number first, then according to the record of temperature value; Long press the S key for 3 seconds, or 10 seconds without interruption of keystrokes query, return measurement state.

For example: When query the records, time sequence number will display from big to small. When pressing the S button, records shows "106 and $5.6\text{ }^{\circ}\text{C}$ ", it stands the recorded data of past 106 hours. When continue to press the S button to the last data, and showing "001 and $23.2\text{ }^{\circ}\text{C}$ ", it is the temperature data for 106 hours ago.

Storage reset and shutdown

Using the pencil tip to press the M button and S button at the same time, memory clear and the thermometer is shutdown.

Low Battery

Thermometer equipped with a built-in cell battery, life is about 2 years, when the battery low and showing ■ symbol on the screen, the thermometer should not be used.

Shenzhen Flamingo Technology Co., Ltd.

www.fmg-tech.com

Shenzhen Flamingo Technology Co., Ltd.

www.fmg-tech.com

sale@fmg-tech.com